

SWITCHPLATE CONFIGURATIONS

If you need any assistance, please contact us and we will gladly work with you.

S = Toggle

O = Outlet

D = Decora

B = Blank

PC = Phone Cable

 
PJ = Phone Jack

PB = Push Button

C = Cable



B2



PC 2 5/8"
Phone Cable



D1 O1



S1 D1