

SWITCHPLATE CONFIGURATIONS

If you need any assistance, please contact us and we will gladly work with you.

S = Toggle
O = Outlet

 
D = Decora
B = Blank

PC = Phone Cable
PJ = Phone Jack

PB = Push Button
C = Cable



B2



PC 2 5/8"
Phone Cable



S1 O1



S1 D1



D1 O1



O1 D1